


## Installation & Maintenance – Anti-Slip Tiles

### Fitting Instructions for ramped edges:

**A rubber mallet is useful for fastening the tiles together  
Do not force the connectors together – take your time.**

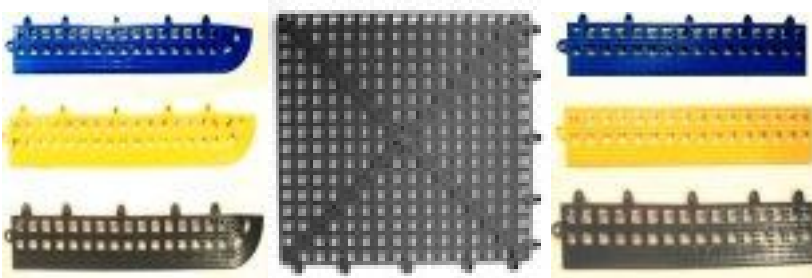

- 1 Lay out square tiles first and fit each one with the “Versatile” logo in the top right hand corner of each tile.
2. Take one straight edge ramp tile and fit to the top of the square tile in the top right hand corner of the overall mat.
- 3 Take one corner edged ramp tile and fit to the side of the square tile in the top right hand corner of the overall mat.
4. Work your way round clockwise attaching the appropriate edge ramp tile until the last one is fitted.
- 5 At some point you will find that there are female connectors on both the square tiles and edging ramp tiles – We suggest that these need to be trimmed off the square tile carefully to ensure a good fit.

### **Please Note – Cutting and Trimming:**

**Do not do this until you are completely sure !**