12 TILE MAT PLAN - UNFIXED

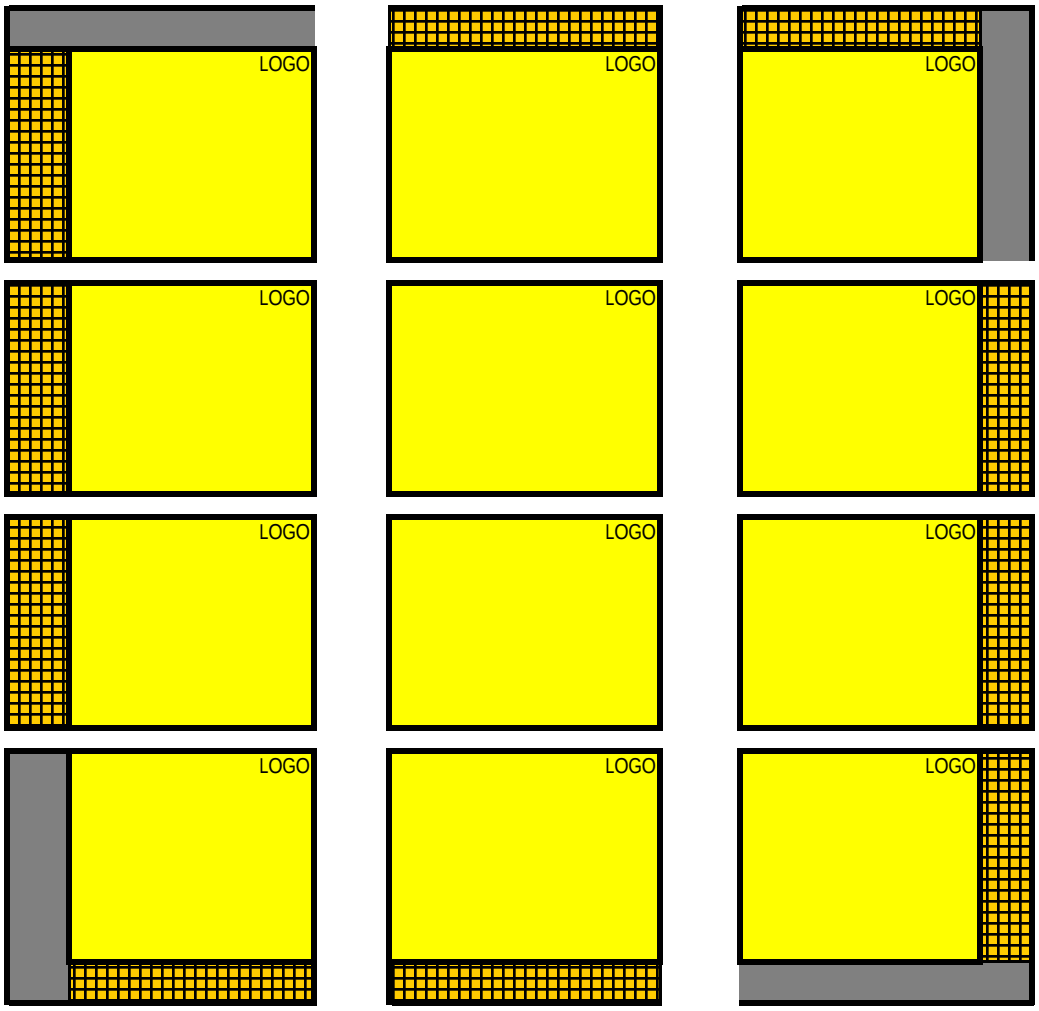

PLACE THE MATS FACE UP IN ORDER AS ABOVE - ALL LOGOS SHOULD BE IN THE TOP RIGHT HAND CORNER.

TURN ALL THE TILES OVER ON TO THE BACKS AND YOU ARE READY TO FASTEN THE CONNECTORS TOGETHER.

FASTEN ALL THE SQUARES TOGETHER FIRST.

THEN FASTEN THE RAMP EDGES TOGETHER - GENTLY EASING OVER THE HOOPED BIT OVER THE LUG - BEST USING A PIECE OF WOOD SUCH AS THE HANDLE OF A SMALL HAMMER OR A WOODEN KITCHEN UTENSIL

ONCE ALL CONNECTORS FIXED YOU CAN TURN THE MAT OVER AND USE IT IMMEDIATELY.

CLEANING - PLEASE SEE FITTING INSTRUCTIONS